

If the box is delivered with a rear panel, insert the panel in the grooves at the back of the side panels. Then, from the top to the bottom, push the rear crossbars with the dimensions 19 x 27 mm onto the metal bolts on the side walls. 4 bars in total. In doing so, the holes can also point to the back as they are not needed for breeding boxes.




Hang the base panels in the holes provided for this.



Press the beech wood perch bars onto the metal bolts on the upright side walls. In doing so, the short clearance of the two slots on the perch bars must point to the front.



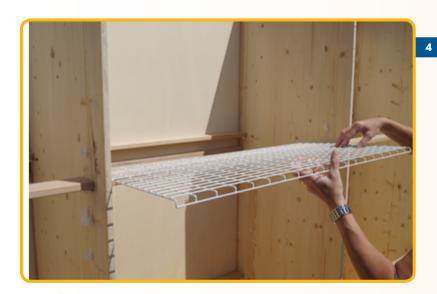



Now the wire meshes are inserted. The folds must point downwards.



Fit the intermediate floor for the second clutch onto the angled hooks on the side panels. The rounded corner of the intermediate floors must point to the front.



There are two different variants. (For the top section rows, left-handed are required, for the lower section rows, right-handed.).





Now fit the front doors.



There are two different variants.
One standard front door: These are fitted on the sides where the platform for the second clutch is also positioned. And one front door with a drinking bowl mounting bracket.
These are fitted on the other side.





Set the top panel onto the angled hooks on the side panels. Then place the plastic drinking bowl in the mounting bracket and fit the wooden feeding bowls.





Two laying bowls can be positioned.



Both front doors can be opened sideways.



Insert the droppings floors.
Afterwards, accurately align the box vertically and horizontally using the spirit level and screw it securely to the back wall.







The sectioned box must now be aligned with the spirit level and securely screwed to the rear wall.



The sectioned box is now fully assembled!